


Xylophone

Compose and loop some original tunes or play some old favorites as Dash drives around!

Set up for: Dash


Step 1

Place Dash on a flat surface. Pull the connector rings of the xylophone outward and line them up to the connection points on the sides of Dash's front wheels. Press firmly to snap the xylophone in place. To make sure the xylophone is properly aligned, check that its wheel is resting on the ground in front of Dash.

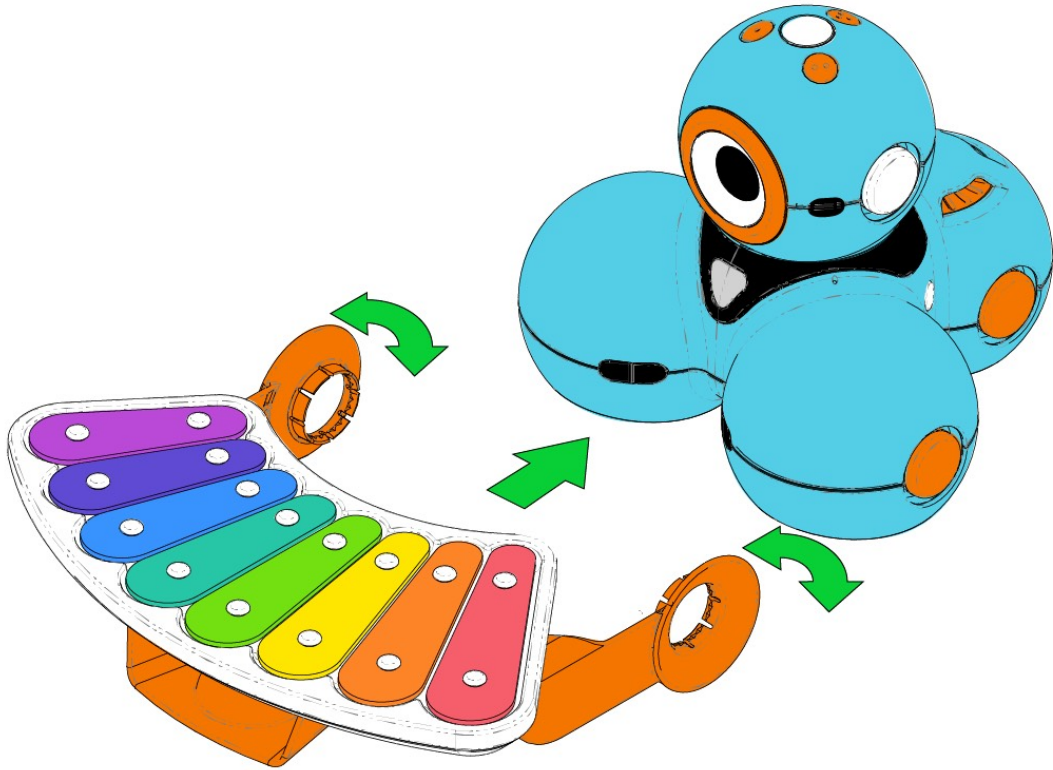

Step 2

Line up the mallet's connector ring with the connection point on the left side of Dash's head. (If you are facing the robot, its left is to your right.)

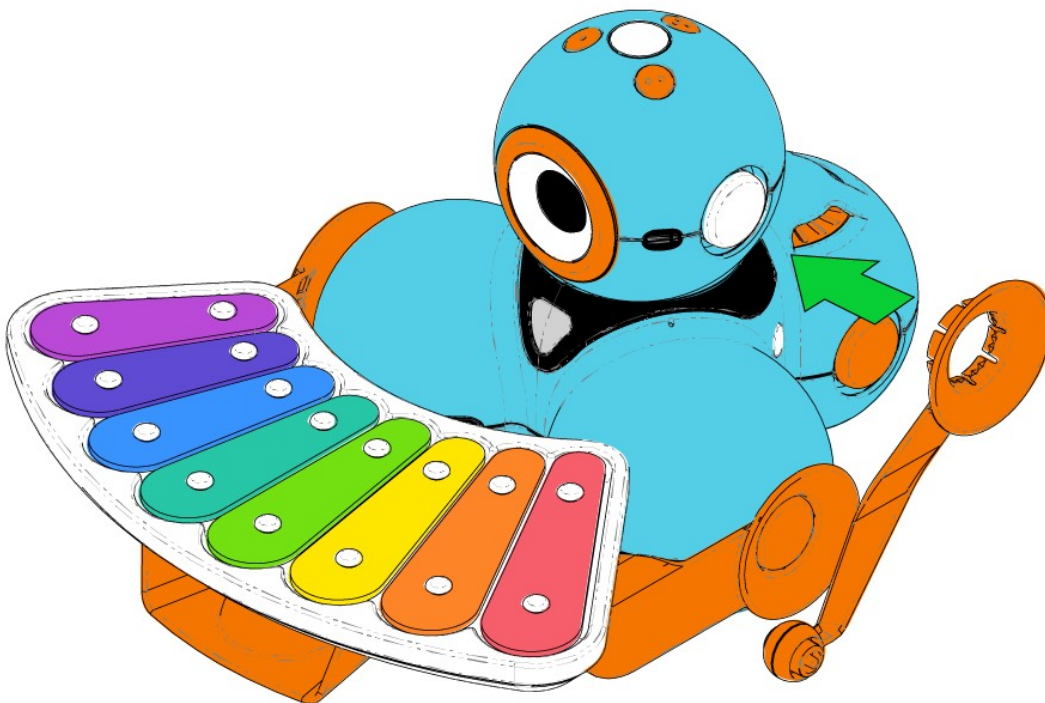

Step 3

Press firmly to snap the mallet into place.



Step 4

To make sure the mallet is properly aligned, check that it is level (pointing straight forward) when Dash's head and eye are facing straight ahead. Once the xylophone is connected, Dash is ready to play!

