


How To

CLASSIC

removeSetup

1) Plug in USB

Small side of USB cable plugs into Makey Makey, big side plugs into computer.

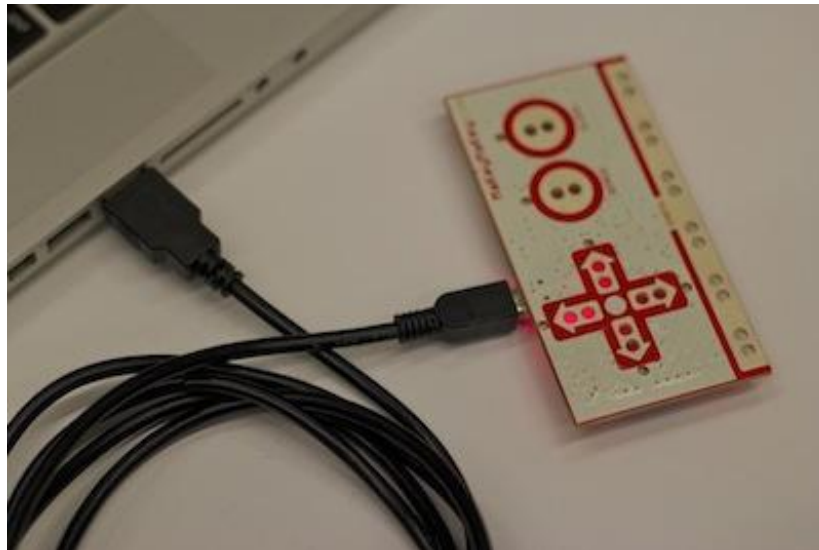


2) Close Popup Window

Your computer may ask you to install drivers or do other setup. You can click cancel or close the window.


3) Connect to Earth

Connect one end of an alligator clip to "Earth" on the bottom of the front side of Makey Makey.

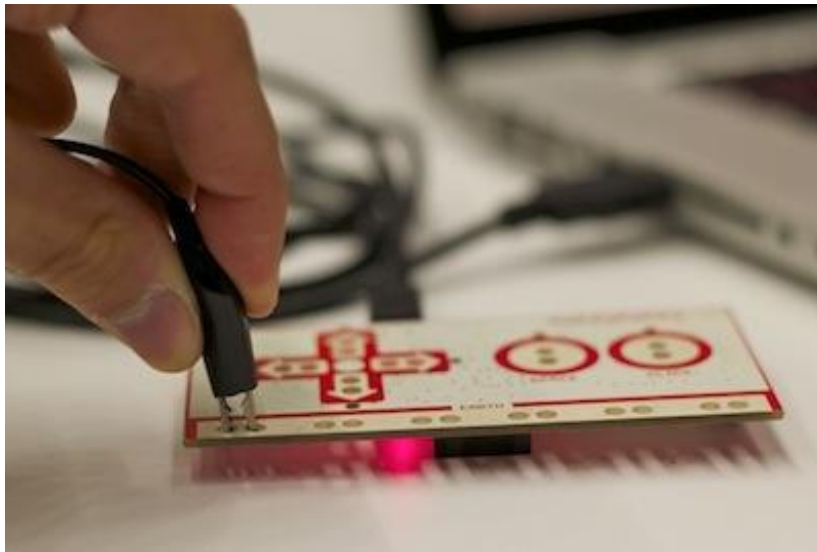


4) Connect to Yourself

Hold the metal part of the other end of the alligator clip between your fingers. You are now "grounded."

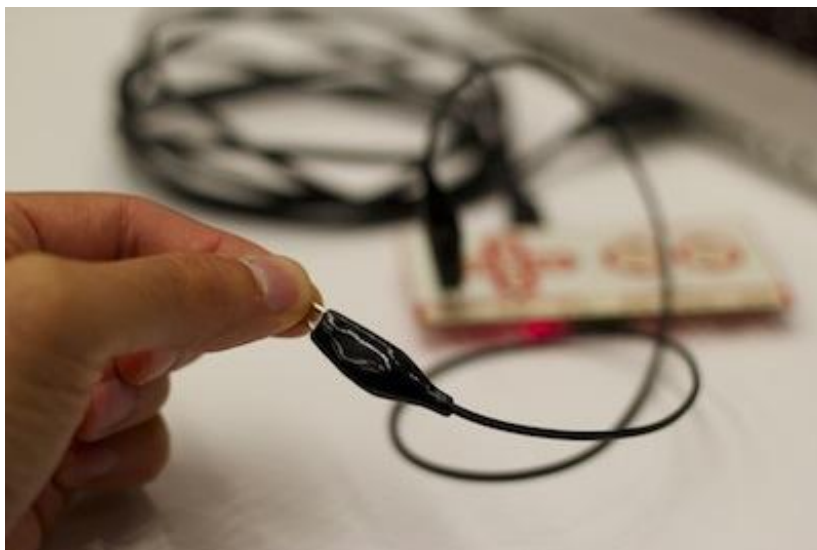


5) Connect to "Space" and Try It

While you're still grounded, touch the round "Space" pad on the Makey Makey. You should see a green light on the Makey Makey, and your computer will think the space bar was pressed. If you click in the text area below, you can make the cursor move. You can also complete the circuit by connecting another alligator clip to "Space."

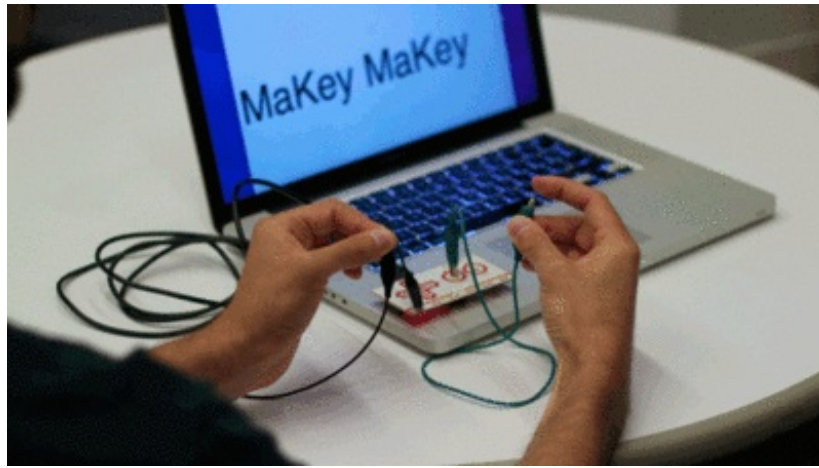


6) Play some Makey Makey drums!


Click below to play some drum sounds using the arrow keys and space on your Makey Makey.

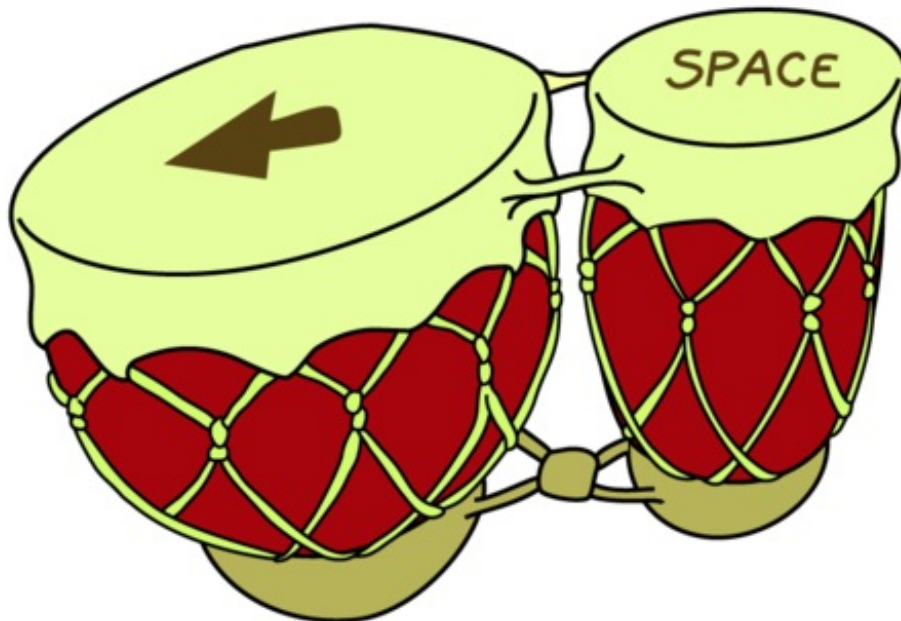

6) Connect Stuff

Now you can try making your drums out of anything. How about a banana cowbell, a watermelon bass drum, or a crash cymbal sound when you high-five your friend?

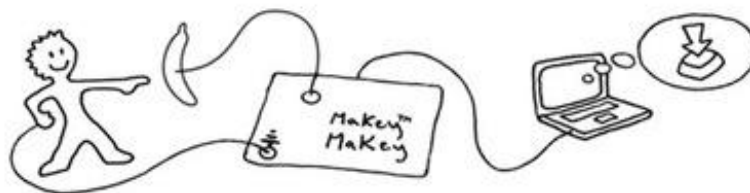

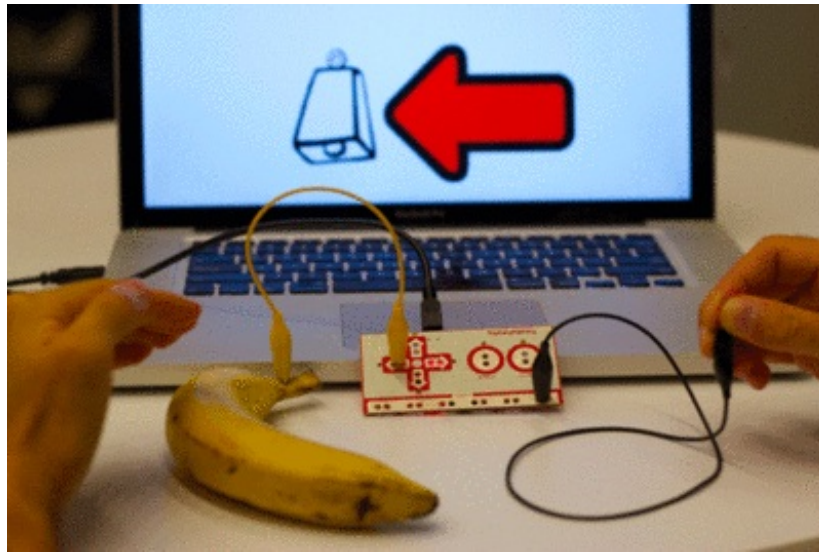

addTry Out Different Materials!

Make anything into a key! You can make a connection through anything that's even a little bit conductive. You can also create inventions that combine conductive and non-conductive parts.

Conductive Materials

Here are a few things to try:

- Most fruits and vegetables work great.
- Lots of other foods work too. We've tried marshmallows, gummy candies, macaroni and cheese, cupcakes, shrimp, and lots of other things.
- Plants can work too. Try some leaves or flowers, but nothing too dry.
- Play-Doh, Model Magic and other clays work very well as long as they stay moist.
- People are conductive! Connect one person to ground, and another to an input, and you can trigger sounds when they high-five.
- Graphite from a pencil can work. Make thick, dark lines, and be sure to draw on a smooth surface.
- Foil and other metal objects will work. Try out coins, magnets, nuts and bolts, forks and knives, or pots and pans.

Craft Materials

When you're inventing, anything goes! Here are a few things we have enjoyed using:

Inflatable beach balls, paper plates, cardboard boxes, various types of soft and rigid foam, lego bricks, plastic storage boxes, stuffed animals and other toys, funny hats and other pieces of clothing, sheets of fabric, string, yarn, elastic, and paper.

It's also important to have around some tools for cutting, like scissors and exacto knives, and ways to stick things together, like hot glue, superglue, various kinds of tape, and clips or clamps.

addTry Out Software

Makey Makey works with any software that uses the keyboard or mouse. You can really use any web page or any computer app. Or,

[Check out our Apps Page](#)



addTroubleshooting

I can't get a key to press!

- Make sure your Makey Makey is plugged into the computer.
- The Makey Makey should have a red light on the back showing that the power is on. Is it lit? If not something is wrong with the computer, the USB cable, or the circuit board.
- If the USB connector on your computer is blue, it's USB 3.0, and may not work with Makey Makey. Try using a USB 2.0 port.
- Try making a connection in the simplest way you can. One way is to connect an alligator clip to "earth" and then touch other end to "space."
- When you make a connection, you should see an LED light up on the front of the Makey Makey
- When you are making a connection using everyday materials they need to be at least a little bit conductive. For example, play-doh, a banana, your skin, or aluminum foil should work, but plastic, most fabrics or paper will not work directly. You can always combine materials, for example by wetting the paper or putting play-doh onto the plastic.

One of the keys won't stop pressing over and over! What should I do?

- Try unplugging the Makey Makey from your computer, then plug it back in again
- Disconnect all of you alligator clips from the Makey Makey, then start reattaching them one by one
- If your stuck key is still pressing, have a look at your connections. They might be touching accidentally somehow. Try taking things apart and putting them back together again.
- Perhaps one of the things that you are using as an insulator (or non-conductor) isn't insulating enough. Try using a different material.
- If one of the objects connected to the Makey Makey is your own body, then perhaps you are "grounded" to the earth via touching your computer's metal case, or by not wearing shoes. Take a step back and see what you are touching.

- Perhaps one of the objects connected to the Makey Makey that you think is well insulated is not. For example, if you connect a banana to your Makey Makey and it's sitting on a wooden cutting board, is that cutting board moist or dry? If it's moist then perhaps all of your bananas on the cutting board are connected to each other through the cutting board. Try a dry table instead.
- Is it raining? Is it extremely humid- are you in a rainforest? This can sometimes cause porous materials, such as paper or clothing, to become conductive.

It works sometimes, but not other times. :(

- Your materials might not be conductive enough. For example, if you are making a connection with your fingertip, it can help to moisten your skin by licking it.
- If you are using a drawn graphite line from a pencil, make sure the line is heavy and dark. Draw your line on a hard smooth surface, such as a table without any grain in it. Take care in folding the paper, because it can sometimes break the graphite connection. Once you are expert at drawing the lines, you don't have to follow any rules, but if you can't get it to work try the tips mentioned.


GO

addSetup

1) Plug in USB

The lights on the GO will dance a little, then settle on Blue.

Blue = Right Click.

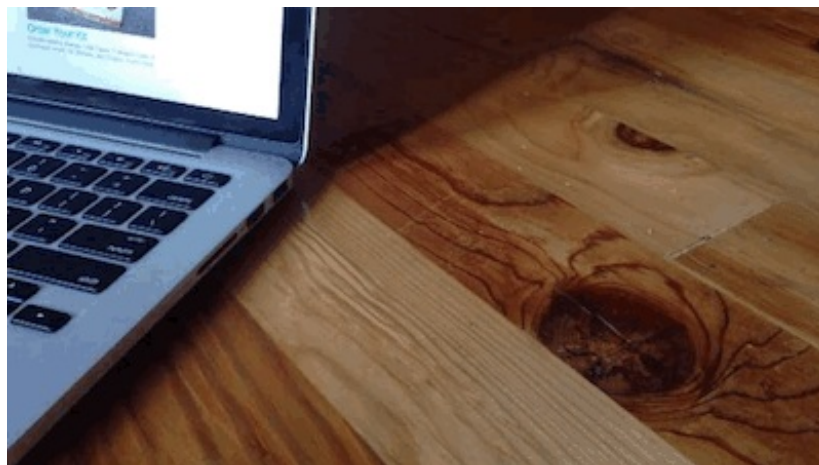


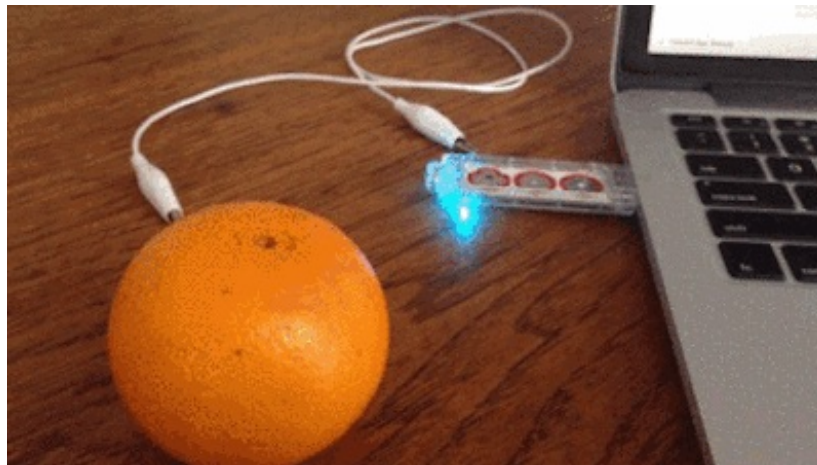
2) Close Popup Window (If Any)

Your computer may ask you to install drivers or do other setup. You can click cancel or close the window.




3) Connect your object

Connect the alligator clip from your object to the Plus Sensor 




4) Press Play

Tap the Play Button  . The GO has now recalibrated itself to accept the object.

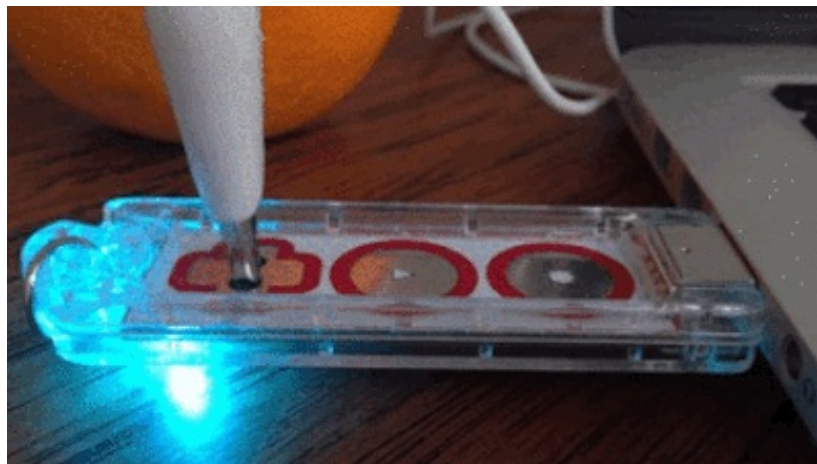


5) Play!

Now you can use your clementine to click on things! Tap your clementine and see what happens.

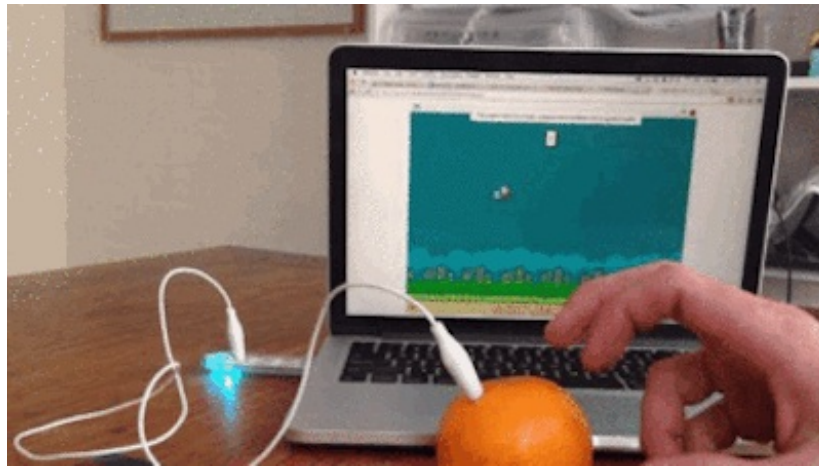

6) Space Out

To switch between "mouse left-click" and "space bar," tap the Gear Button  on the Makey Makey GO. This will turn the light Red. Now tapping your clementine will send a "space bar" signal to your computer.



Red light = space bar

Blue light = mouse left-click

Green light = active sensor


*add*Use different keys!


If you want to go beyond "left click" and "spacebar", visit makeymakey.com/remap and follow the instructions to change what key command is triggered by the Makey Makey when the light is Red.

"Left click" will always be there when you switch to the Blue light.

Unplugging your GO will reset the keys to "space bar" and "left click".

*add*Sensitive Settings

Press and hold the Play Button 

The Sensitive Setting is still calibrating to the specific object you have connected, although with greater sensitivity. Tap the Play Button  again to leave the Sensitive Setting.

Say you've got a big pot, and you tap play, and then you tap the pot, but Makey Makey GO can't tell you're touching the pot (the light doesn't turn green). This is a good time to try the sensitive setting.

addExtras

Send a Postcard!

Use the backboard! Put a postage stamp and an address on it and send it on its way.

Can't think of someone to write to? Send us a drawing of your invention! We're at

JoyLabz

PO Box 1444

Santa Cruz CA 95061




addTry Out Different Materials

Make anything into a key! You can send a signal through anything that's even a little bit conductive. You can also create inventions that combine conductive and non-conductive parts.

Conductive Materials

Here are a few things to try:



- Most fruits and vegetables work great.
- Lots of other foods work too. We've tried marshmallows, gummy candies, macaroni and cheese, cupcakes, shrimp, and lots of other things.
- Plants can work too. Try some leaves or flowers, but nothing too dry.
- Play-Doh, Model Magic and other clays work very well as long as they stay moist.
- People are conductive! Connect one person to the Plus Sensor  and see what happens when they high five another person. Keep in mind that it'll work best when the smaller person is connected to the Makey Makey GO. You may also want to use the

"sensitive setting" for people!


- Graphite from a pencil can work. Make thick, dark lines, and be sure to draw on a smooth surface.
- Foil and other metal objects will work. Try out coins, magnets, nuts and bolts, forks and knives, copper tale, or pots and pans.

*add*Troubleshooting

I can't get a key to press!

- Make sure your Makey Makey GO is plugged into the computer.
- The Makey Makey GO should have a red or blue light on the back showing that it is connected properly. Is it lit? If there's no light, something is wrong with the computer or the GO.
- If a light comes on but it's green, try tapping the Play Button  to recalibrate the GO.
- If the USB port on your computer is blue plastic, it's USB 3.0, and may not work with Makey Makey GO. Try using a USB 2.0 port. This problem comes up with Windows 7 machines most often.
- Try sending a signal in the simplest way you can. Just tap the Plus Sensor  with your finger to see if the light turns green. If it turns green, it should be sending a signal to your computer.
- When you are alligator clipping everyday materials, they need to be at least a little bit conductive. For example, play-doh, a banana, or aluminum foil should work. Plastic, most fabrics or paper will not work directly. You can always combine materials, for example by wetting the paper or putting play-doh onto the plastic.

One of the keys won't stop pressing over and over! What should I do?

- Try tapping the Play Button 
- Try unplugging the Makey Makey GO from your computer, then plug it back in again.
- If the object connected to the Makey Makey GO is your own body, then perhaps you are sending a connection by touching your computer's metal case, or by not wearing shoes. Take a step back and see what you are touching.
- Perhaps one of the objects connected to the Makey Makey GO that you think is well insulated is not. For example, if you connect a banana to your Makey Makey and it's sitting on a wooden cutting board, is that cutting board moist or dry? If it's moist then perhaps your hand is sending a signal through the moisture.
- Is it raining? Is it extremely humid- are you in a rainforest? This can sometimes cause porous materials, such as paper or clothing, to become conductive.

It works sometimes, but not other times. :(

- Your materials might not be conductive enough. For example, if your object is a vegetable, does it have a dry skin?
- If you are using a drawn graphite line from a pencil, make sure the line is heavy and dark.

Draw your line on a hard smooth surface, such as a table without any grain in it. Take care in folding the paper, because it can sometimes break the graphite connection. Once you are expert at drawing the lines, you don't have to follow any rules, but if you can't get it to work try the tips mentioned.